
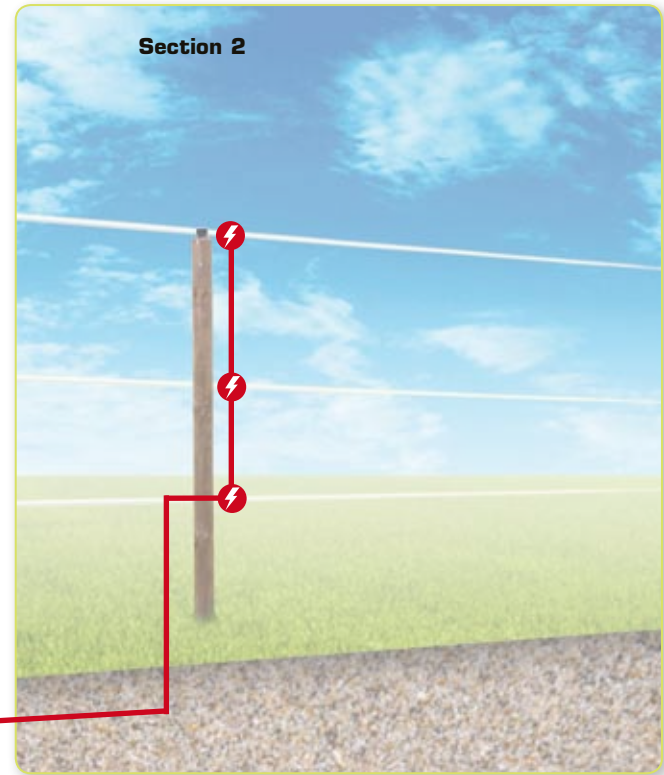


SECTION SWITCH

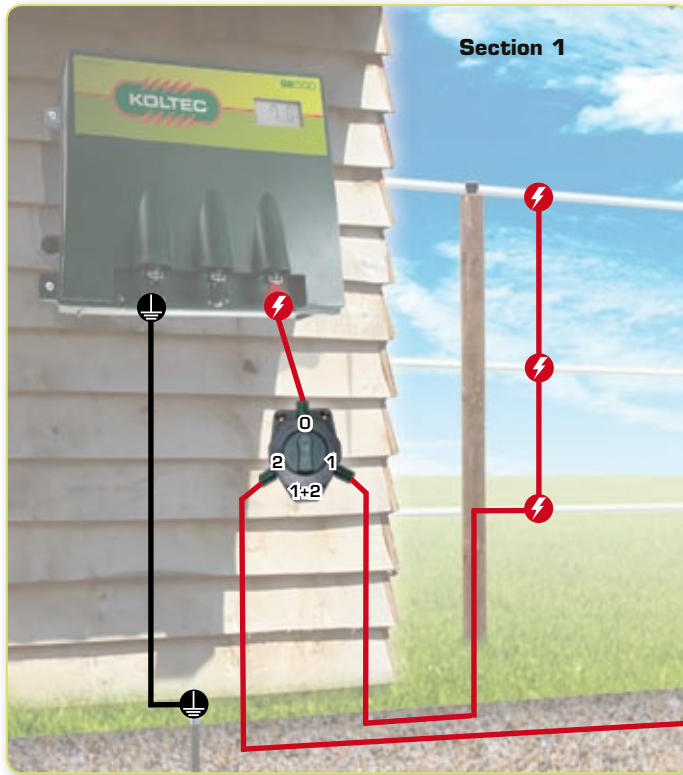

1. SECTION SWITCH

The switch has 4 positions you can choice between.

0 = The tension is not transmitted

1 = Section 1 under tension

2 = Section 2 under tension

1+2 = Section 1 & 2 under tension

